

Warning Lights

All symbols & their meaning — reference card

RED — STOP IMMEDIATELY



Coolant temperature

Engine overheating or coolant too low



Engine oil pressure

Oil pressure too low – stop at once



Engine fault (red)

Serious fault – ease off, go to garage



Engine oil level

Oil level too low – check oil



Electronic parking brake

Parking brake fault



Steering

Steering fault – drive carefully



Seat belt

Driver or passenger not buckled up



AdBlue level too low

Nearly empty – engine will not restart



High-voltage battery

High-voltage battery fault (EV)

YELLOW / AMBER — CHECK SOON



Exhaust / engine control

Fault in engine or emission control



Engine oil system

Fault in the engine oil system



Particulate filter

Soot filter full – drive to clear it



Brake pad wear

Brake pads worn



Anti-lock brakes (ABS)

ABS fault – normal brakes still work



Traction control (ASR)

Traction control off or faulty



Front Assist

Emergency brake / distance assist off or faulty



Adaptive cruise (ACC)

Distance control faulty or unavailable



Lane Assist

Lane-keeping assist off or faulty

YELLOW / AMBER — CHECK SOON (CONT.)

	Reduced performance	Power reduced – vehicle in limp mode
	Washer fluid	Nearly empty – top up
	Central warning light	Master warning – read the display
	Exterior lighting	Exterior light fault
	Rear fog light	On – use only when visibility under 50 m
	Emergency Assist	Emergency stop assist active or faulty
	Passenger airbag off	Passenger front airbag is disabled
	AdBlue level low	Low – top up soon

GREEN / BLUE — INFO

	High beam	High beam is on
	Coolant (cold)	Engine / coolant still cold
	Press brake pedal	Press the brake – e.g. to start
	Cruise control	Cruise control active

Symbols and meaning may vary by make, model and year. When in doubt, your vehicle handbook applies. For red lights, always react immediately.